



Throttle lever cable end

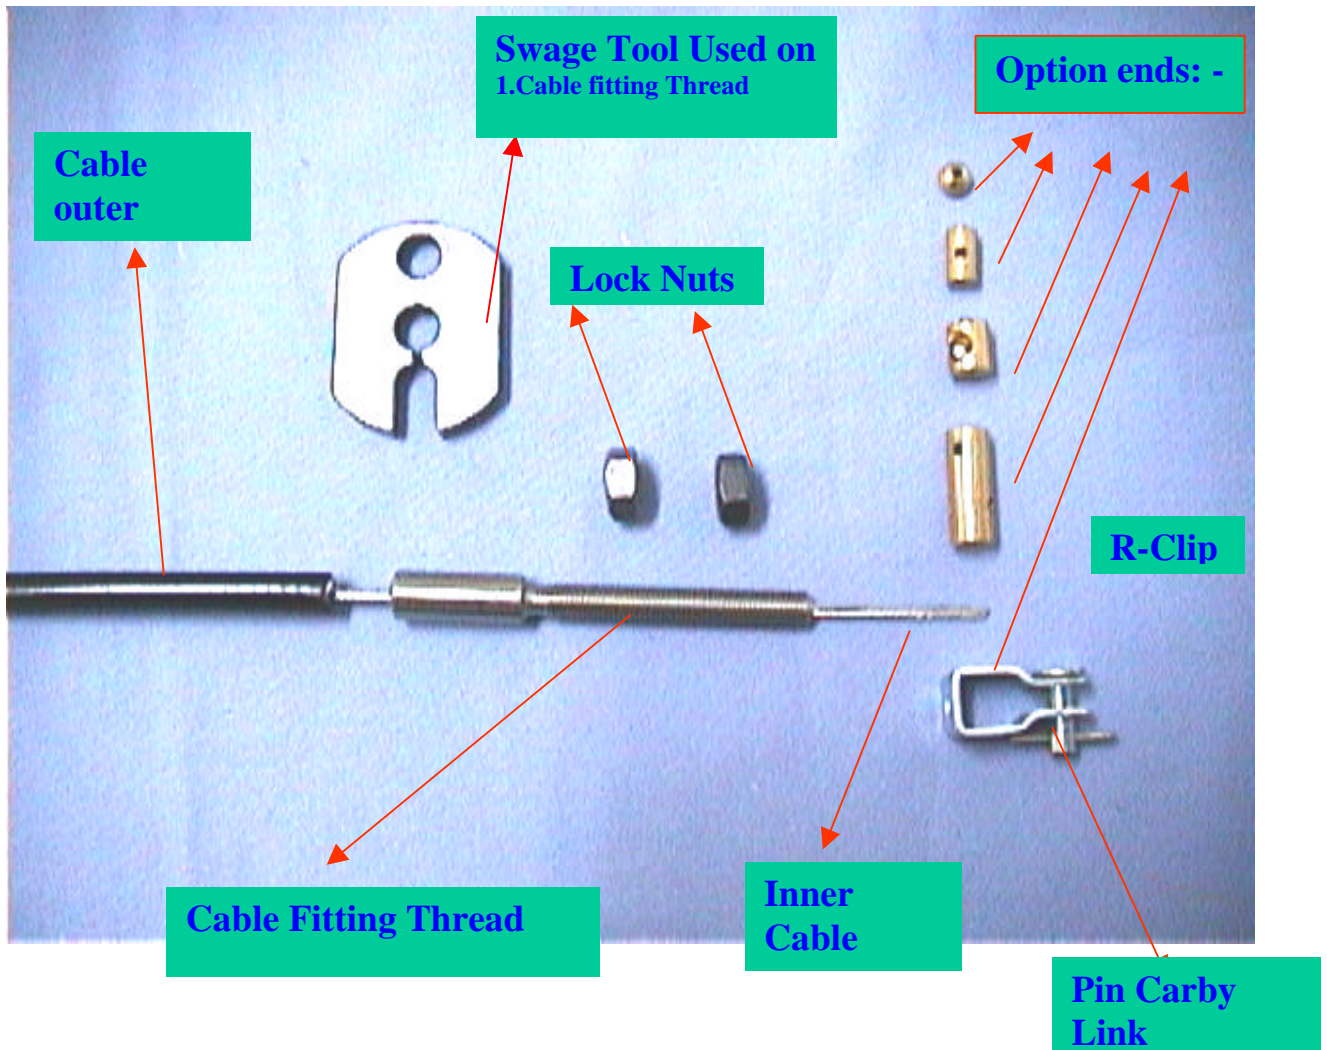

Procedure

- Step 1. Crimp Cable fitting Thread to Outer cable with Swage Tool.
- Step 2. Cut inner to length so it fits your lever.
- Step 3. Select one of the options that fit your Throttle lever.
- Step 4. Solder the fitting onto the end of the Cable, except when using the Pin Carby Link. Solder the smallest option either side of the link.
- Step 5. Lock the Jam Nuts in the correct position.

Carby Cable End

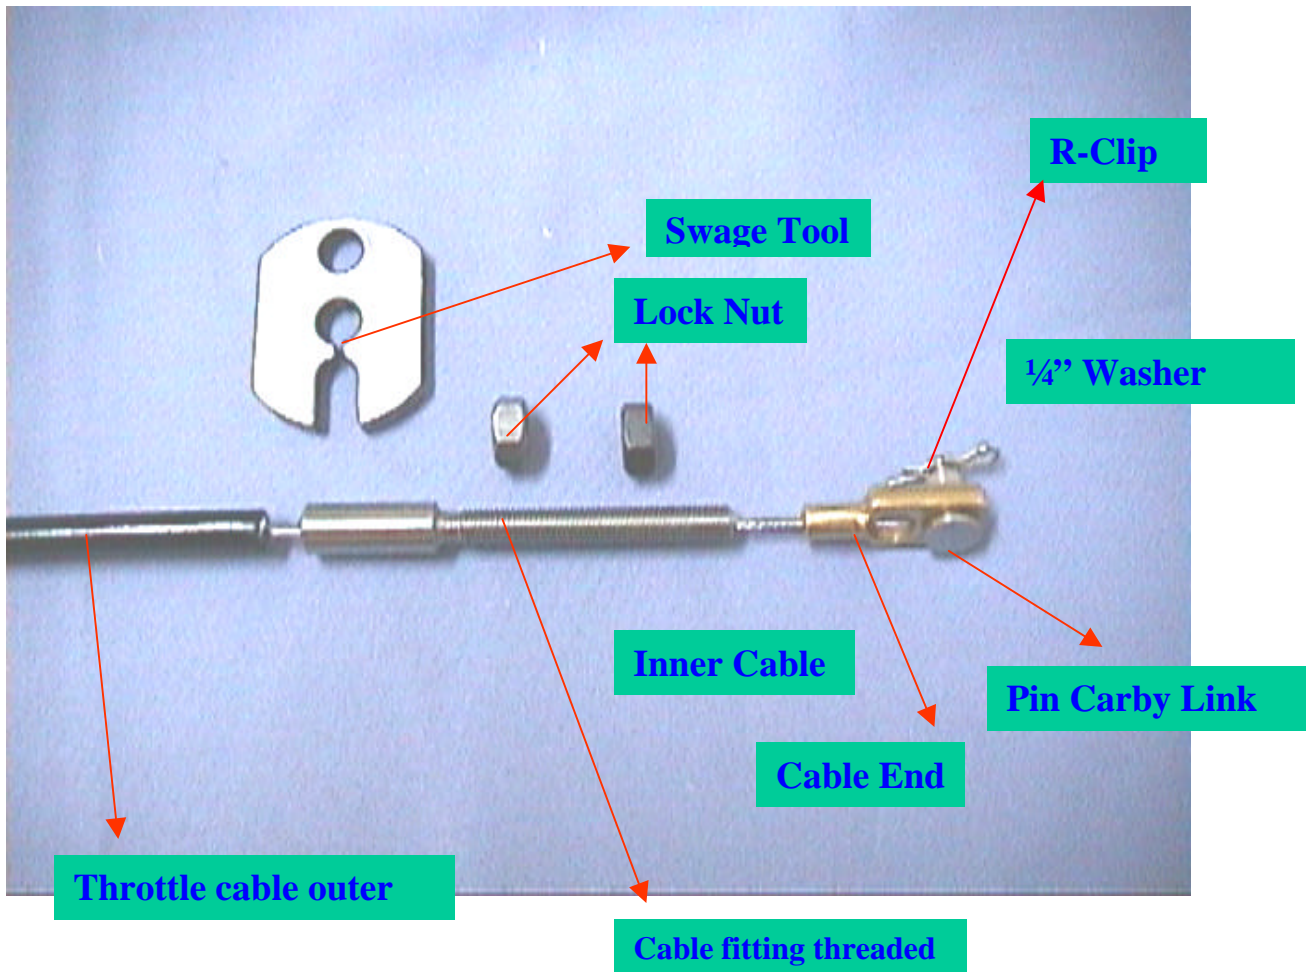

Procedure

- Step 1. Crimp Cable fitting Thread to Outer cable with Swage Tool.
- Step 2. Cut inner to length so it fits your lever.
- Step 3. Select one of the options that fit your Throttle lever.
- Step 4. Solder the cable end fitting making sure you have the inner proceeding into the hole. Splay the end out then apply solder onto the end of the Cable.
- Step 5. Lock the Jam Nuts in the correct position.
- Step 6. Put "Pin Carby Link through the carby out put lever.
- Step 7. Place 1/4" washer over Pin Carby Link, then put R-Clip in position